
# CPT-01

# Quantometer for secondary measurements


CPT Quantometers have been designed in order to provide our customers with reliable and inexpensive measuring instruments for secondary flow measurements. Our great experience in designing and manufacturing of turbine and rotary gas meters resulted in the development of industrial quantometers.

Taking into account our customers' demands we created the instrument with excellent metrological characteristics and operating performance close to performances of the turbine gas meters designed for custody transfer measurements. Other advantages of the CPT Quantometers are as follows: high quality, easy maintenance, wide range of external devices that can co-operate with the quantometers, e.g. volume correctors, data loggers, data transmission systems. Due to that the CPT Quantometers are well accepted by our domestic and foreign customers.

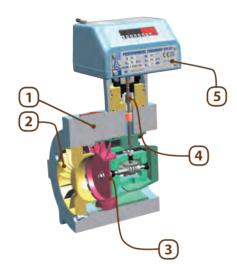

The basic components of the CPT Quantometer are as follows:

- pressure resistant meter body (1)
- inlet flow straightener (2)
- measuring cartridge with the turbine wheel (3)
- magnetic coupling as the transferring element between measuring cartridge and the index head (4)



- nominal diameter:DN25 up to DN200
- meter body: aluminium or steel (DN200)
- flow: 2,5 to 1600 m<sup>3</sup>/h
- rangeability: up to 1:30 (depending on the meter)
- temperature range:
  gas temperature: -20°C to +60°C
  ambient temperature: -25°C to +70°C
- operating position: horizontal or vertical
- $\begin{array}{l} \qquad \qquad \text{measurement accuracy:} \\ Q_{\text{t}} \div Q_{\text{max}} < \pm 1,5\% \\ Q_{\text{min}} \div Q_{\text{t}} < \pm 3,0\% \end{array}$
- ✓ allowed medias: see Table 5







# Dimensions and weight

Sandwich version DN50 - DN200

# Overall dimensions and weights of the CPT-01 Quantometers

Table 1: Specification of the CPT-01 Quantometers.

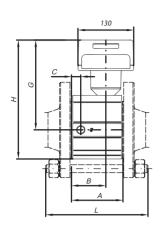

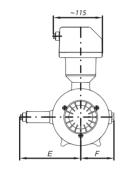

Dimensions E & F for all types

DN G		Maximum flow	Pressure loss at		LF pulse rate	HF1, HF2 pulse rate	HF pulse rate			
		Q <sub>max</sub>	Q <sub>max</sub>	1:10	1:20	1:30				
		m³/h	mbar	m³/h	m³/h	m³/h	pulse/m <sup>3</sup>	pulse/m <sup>3</sup>	pulse/m³	
	10 65 25 6 2610 04920									
03 100 3,0 10 2010 34030										
50	40	65	2,5	6	-	-	10	2610	94830	
50	65	100	5,0	10	-	-	10	2610	94830	
65	65	100	1,6	10	8	-	10 1	1081	42560	
05	100	160	3,8	16	8	-		1081	42560	
	100	160	3,7	16	8	-	1	1081	42560	
80	160	250	5,4	25	13	8		844	30650	
	250	400	11,4	40	20	13		470	17060	
	160	250	3,7		13	8		692	16780	
100	250	400	4,2	-	20	13	1	692	16780	
	400	650	8,8	-	32	20		401	9720	
	400	650	2,4	-	32	20	1	227	6870	
150	650	1000	6,4	-	50	32	1	227	6870	
	1000	1600	16,0	-	80	50	0,1	129	3910	
	650	1000	2,0	-	50	32	1	114	3110	
200**	1000	1600	6,0	-	80	50	0.4	116	3170	
	1600	2500	15,0	-	130	80	0,1	67	2025	

<sup>\*</sup> Pressure loss for air at atmospheric conditions

All quantometers' bodies are made of aluminium apart from DN200. Contact your local representative or the producer to get more information about the products.

Table 2: Dimensions and weights of the CPT-01 Quantometers.

DN	Α	В	С	D	E	F	G	Н	J	k T	L	Weight
DIN	mm	mm	mm	mm	mm	mm	mm	mm	mm		mm	kg
50	100	65	18	32	158	74	199	252	78	4xM16	200	3,6
65	120	80	21	38	170	86	211	278	90	4xM16	220	5,1
80	120	80	21	38	170	86	211	278	90	8xM16	220	5,3
100	150	100	29	53	185	100	225	305	105	8xM16	250	7,4
150	180	127	50	76	210	125	243	351	130	8xM20	300	11,6
200	200	146	56	83	225	140	272	407	145	12xM20	320	48,5

 $<sup>\</sup>textbf{k}^*$  - amount of stud bolts necessary for mounting the wafer-type quantometers Contact your local representative or the producer to get more information about the products.

Overall dimensions and weights of the CPT-01 Screwed Quantometers

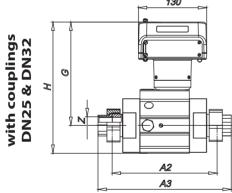


Table 3: Specification of the CPT-01 Screwed Quantometers.

		Internal thread	Maximum flow Q <sub>max</sub>	Preassure loss*		Minimum flow Q <sub>min</sub>	LF	HF1, HF2	HF3
DN	DN G			Q <sub>nom</sub>	Q <sub>max</sub>	1:10	pulse rate	pulse rate	pulse rate
		inch	m³/h	m	ıbar	m³/h	pulse/m³	pulse/m³	pulse/m³
25	16	1;1¼	25	1,5	4	2,5	10	9770	113585
25	25	1	40	1,5	4	4		8710	101275
32	25	1¼	40	1,4	3,2	4	10	8925	103755
40	40	0.447	65	1	2,5	6	10	2610	94830
40	65	G 1½	100	2	5	10		2610	94830
50	40	G 2	65	1	2,5	6	10	2610	94830
50	65		100	2	5	10		2610	94830

<sup>\*</sup> Pressure loss for air at atmospheric conditions


All quantometers' bodies are made of aluminium. Contact your local representative or the producer to get more information about the products.

Table 4: Dimensions and weights of the CPT-01 Screwed Quantometers.

DN	A1	A2	А3	G	Н	Z	Weight
DN	mm	mm	mm	mm	mm	inch	kg
25	-	200	250	199	252	1; 1¼	4,6
32	-	200	250	199	252	1¼	4,6
40	160	1	1	199	252	G 1½	4,4
50	160	-	-	199	252	G 2	4,4

G-threads as per DIN/ISO 228-1 standard and the others as per ISO 7-1/EN 10226-1 standard.

with internal thread **DN40 & DN50** 

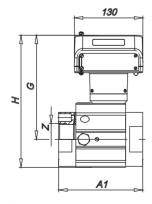



<sup>\*\*</sup> DN200 casing is made of steel.



#### Pressure loss

Pressure drop during the gas flow through the quantometers is determined for air at atmospheric conditions. Maximum value of the  $\Delta p_{max}$  pressure drop for every CPT-01 Quantometer is given in Tables 1 and 3. This value was established during tests carried out at  $Q_{max}$  with air ( $\rho = 1,2kg/m^3$  density). At real conditions  $\Delta p_{ra}$  pressure drop may be calculated with the following formula:

$$\Delta p_{rz} = \frac{\rho}{\rho_0} \cdot \frac{p_a + p}{p_a} \cdot \left(\frac{Q_{rz}}{Q_{max}}\right)^2 \cdot \Delta p_{max} [mbar]$$

# Definitions:

 $\rho$  - gas density according to Table 5 [kg/m<sup>3</sup>]

 $\rho_0$  - air density, 1,2kg/m<sup>3</sup>

 $p_a$  - base pressure (1013,25mbar)

p - gauge pressure [mbar]

 $\Delta p_{max}$  - maximum pressure loss [mbar]

 $\Delta Q_{max}^{max}$  - maximum flow according to Table 1 or 3 [m<sup>3</sup>/h]

 $Q_{r_3}$  - flow at real conditions [m<sup>3</sup>/h]

Table 5: Physical properties of the most popular gases that may be measured by CPT-01 Quantometer.

Density at 101,325kPa and 20°C.

Gas	Chemical symbol (formula)	Density ρ [kg/m³]	Density related to air	Execution
Argon	Ar	1,66	1,38	Standard IIB
Butane	C <sub>4</sub> H <sub>10</sub>	2,53	2,10	Standard IIB
Carbon dioxide	CO <sub>2</sub>	1,84	1,16	Standard IIB
Carbon monoxide	СО	1,16	0,97	Standard IIB
Ethane	C <sub>2</sub> H <sub>6</sub>	1,27	1,06	Standard IIB
Ethylene	C <sub>2</sub> H <sub>4</sub>	1,17	0,98	Standard IIB
Helium	He	0,17	0,14	Standard IIB
Methane	CH <sub>4</sub>	0,67	0,55	Standard IIB
Natural gas	-	~0,75	~0,63	Standard IIB
Nitrogen	N <sub>2</sub>	1,16	0,97	Standard IIB
Propane	C <sub>3</sub> H <sub>8</sub>	1,87	1,56	Standard IIB
Acetylene	C <sub>2</sub> H <sub>2</sub>	1,09	0,91	Special IIC
Hydrogen	H <sub>2</sub>	0,08	0,07	Special IIC
Air	-	1,2	1,00	Standard IIB

### Description of pulse sensor connections

Pulse sensor pin numbering in sockets 1 and 2 installed in the index head. The sockets match the TUCHEL plug No C091 31H006 100 2

Connection lead no	Socket 1 pulse sensor	Socket 2 pulse sensor
1 - 4	LFK 1 (standard)	LFK 2
2 - 5	LFI 1	LFI 2
3 - 6	HF1 or AFK	HF2



Pulse sensor pin numbering of the HF3 pulse transmitter's socket installed in the body. The sockets match the TUCHEL plug No C091 31D004 100 2

Connection lead no	HF over turbine wheel
1 - 2	Not used
3 - 4	HF3



# Outputs

- As an option the meters can be provided with maximum 7 pulse transmitters
- STANDARD
  - 2 off LFK low frequency reed contact pulse sensor
- ✓ OPTIONS
  - 2 off LFI low frequency inductive pulse sensor (NAMUR)
  - 2 off HF inductive pulse sensors in the index head (NAMUR) HF1, HF2
  - 1 off HF inductive pulse sensors in the meter body (NAMUR) - HF3
  - AFK anti-fraud reed contact
- Electrical outputs Amphenol TUCHEL
- Index housing made of aluminium what perfectly protects index head against accidental damages
- Index housing may be provided with two separate sockets
- 1 pressure measurement tap
- 3-way valve recommended for making connections with EVC's pressure sensor



Optional index heads



Index head with encoder (option)



Index head with mechanical output (option)



# Installation and operation recomendations

- Meters should be shipped in their original package to the place of installation.
- Meters have to be handled with care and protected against falls, direct influence of rain, snow or high humidity.
- The measured gas should be clean, dry and free from solid impurities.
- It is recommended that the upstream pipe installation is to be equipped with a filter (10 micron).
- Prior to putting into operation in new installations, it is recommended to install a temporary top hat filter.
- Prior to installation the upstream and downstream piping and flanges should be aligned properly.
- Flange gaskets are to be installed so as not to disturb the gas flow.
- The gas flow should be in accordance with the arrow placed on the meter body.
- The piping should be executed so as to avoid unnecessary stresses acting on the meter.
- When used outdoors the meter should be protected against direct weather influence.
- When starting the gas flow through the installation, the valves should be opened slowly to ensure a gradual increase of pressure.
- It is required to install the quantometer after a 5D upstream pipe lenght and before 3D downstream pipe lenght.

ATTENTION! If valves are opened abruptly or pressure increase takes place in a short time it may happen that the measurement cartridge or the turbine wheel get damaged.

INCREASE PRESSURE GRADUALLY - NO MORE THAN 350 mbar/s!

ALWAYS REMEMBER TO START UP THE METERS IN A PROPER WAY!

For more information, contact your local sales representative





COMMON SPÓŁKA AKCYJNA ul. Aleksandrowska 67/93 91-205 Łódź, Poland Tel. +48 42 253 66 00 Fax. +48 42 253 66 99 www.common.pl

